

SKYSTAR

PROFESSIONAL SHOW LIGHTING

SR-380PRO BEAM MOVING-HEAD

USER MANUAL



SKYSTAR

GUANGZHOU LIGHTSTAR LIGHT CO.,LTD

[Http://www.lightskystar.com](http://www.lightskystar.com)

1.INDEX

Many thanks for choosing SR-380PRO beam moving head. The design & production are passed through the full quality control to ensure the fineness ability.

This manual covers important information about installation & operation of this projector. Please read this user manual carefully before installing or operating this projector. Please do follow the safety instruction list as below carefully and keep this manual in a safety place for future reference.

Note: As part of our ongoing commitment to continuous products development, company will keep the right to improve this products, the information in this menu may be changed in the future, the company reserve the right to change the data without any advise.

2.Packing

2.1 The packing of the series of products is paper carton, the flycase can order.

2.2 To open the carton

First please open the carton and take out the relative accessories, Take out the projector from the polybad and put it on a very smooth & horizontal surface place for the next operation.

Attention: Do not press the plastics parts to avoid any damage and distortion.

2.3 Packing list

The following parts are packed together with the projector:

Attachment	
DMX cable	1pc
User manual	1pc
Mouting Bracket	2pc

3. Install and safe usage

3.1 Install the projector:

3.1.1 Requirement for the installing place:

Please do ensure fasten the mount bracket firmly before installing. The mount bracket must share the weight 10 multiple weight of the projector's.

3.1.2 The method of installation and caution:

3.1.2.1 Connect the mount bracket well and fix the clamp firmly to the truss in order to avoid the projector loose or falling.

3.1.2.2 The projector should be mounted via its clamp by using 2 bolts. The clamp itself attached to the underside of the projector with 4 bolts provided in the package. Always make sure that the projector is anchored firmly to avoid any vibration or falling.

 
3.1.2.3 For safety the projector should have a secondary fixing with a safety cord through the truss and the handle of projector. The safety cord will fasten the projector on the truss tightly to avoid any vibration or falling directly if the clamp or the truss is loose.

3.1.2.4 When installing the projector, not allow any person pass by,

3.1.2.5 After installing the light. Please inspect whether the safety cord attached, clamp or truss is loose in order to avoid the projector will slip. If any dangers is happened by falling, the manufacturer won't be responsible for it.

3.1.2.6 Other safety terms

3.1.2.6.1 Minimum distance between the projector's shot & goal project:



SR-380PRO DMX Channel Control	
CH1 Color	0-7 8-15 16-23 24-31 32-39 40-47 48-55 56-63 64-71 72-79 80-87 88-95 96-103 104-111 112-127 128-191 192-255
CH2 Strobe	0 240 241-255
CH3 Dimmer	0 240 241-255
CH4 GOBO	128-255 fast Low fast
Ch5 PrismA	0 10 11 90 91 170 171 255
Ch6 PrismB	0 10 11 255
Ch7 Rota gobo	0-14 30-44 45-59 60-74 75-89 90-104 105-119 120-127 128-255 fast Low fast
Ch8 Gobo rota	0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141 142 143 144 145 146 147 148 149 150 151 152 153 154 155 156 157 158 159 160 161 162 163 164 165 166 167 168 169 170 171 172 173 174 175 176 177 178 179 180 181 182 183 184 185 186 187 188 189 190 191 192 193 194 195 196 197 198 199 200 201 202 203 204 205 206 207 208 209 210 211 212 213 214 215 216 217 218 219 220 221 222 223 224 225 226 227 228 229 230 231 232 233 234 235 236 237 238 239 240 241 242 243 244 245 246 247 248 249 250 251 252 253 254 255 Stop fast speed Low speed fast speed Stop
Ch9 Focus	0 255
Ch10 Pan	0° 255° 540°
Ch11 Pan Fine	0° 255° 3.6°
Ch12 Tilt	0° 255° 250°
Ch13 Tilt Fine	0° 255° 3°
Ch14 Mode	0 255
Ch15 6 color Atomization	0 127 128 191 192 255 6 color frost
Ch16 Reset	100-105 Turn off the lamp 200-205 Turn on the lamp (off the lamp after 1 minute) 255 Later 2s System Reset

When fix the orientation of the projector. Please keep the minimum distance between the flammable retarding subject and the projector's shot is 0.8M at least.(Picture1) But the minimum distance between the inflammable and the projector's lens should be kept away 2m at least. (Picture2).

3.1.2.6.2 The minimum distance between the inflaming retarding subject and any other part of the light:

When fix the orientation of the projector.Please keep the minimum distance between the inflaming retarding subject and the projector shot is 0.3m at least.

3.1.2.6.3 MAX ambient temperature:

In order to ensure the light could operate normally, the ambient temperature couldn't be higher than 33 degree and no lower than 2 degree.

3.1.2.6.4 Electric shock&static electricity portection:

These projectors are designed depends on the electric shock protection, the projector should be connected when the power supply is enough.The projector's ground cable should be connected with the ground cable of the power supply system as well.

3.1.2.6.5 Surface temperature:

Under normal condition,the highest sectional surface temperature may be up to 90-120 degree.

3.1.2.6.6 Connct the main power supply:

Connecting the main power supply should be done by the professional person.

3.1.2.6.6.1 Please check the voltage, frequency data of power supply system is suitable for the mentioned on the projector. Please do avoid the different voltage between them and burn the projector.

3.1.2.6.6.2 Please refer to the actual wattage of the projector's lamp multiply 1.5 multiple multiply total quantity of the projector then you could get the minimum power supply loading. If your power cable can't share the minimum power supply loading. Please don't connect all the projectors meantime.

4.Lamp replacement

4.1 Lamp description:

Model	Lamp description
SR-380PRO	Recharge lamp:18R
	Color temperature:8000K

4.2 Lamp replacement

Per to the SR-380PRO ,please open the lamp access panel at the rear of the projector by undoing the 4 hand-operated screw.then you can begin to replace the lamp.Pull out the old lamp from the lamp bracket and then plug in the new lamp. Remount the lamp bracket and fasten the screw at both side tightly or the lamp's loose connection will result in high tension short circuit or electric discharge which will effect the lamp life or damage the PCB board.When finished the lamp replacement,please close the cover and fasten the screw at both side tightly.

8.TECHNICAL PARAMETER

VOLTAGE: AC100- 240V 50/60Hz

LIGHT SOURCE: 18R 380W

POWER CONSUMPTION: 460W

BEAM ANGLE: 0°--2°

ELECTRONIC FOCUS: 20 meters, 180000 LUX

1 COLOR WHEEL: 12 colors+open, half color effect, bi-directional rainbow effect at variable speed

1 ROTATING GOBO WHEEL:6 rotating gobos+open, bi-directionally rotating at variable speed

1 FIX GOBO WHEEL:15 fix gobos+open, bi-directionally rotating at variable speed

2 PRISM WHEEL:4PRISM (SR-380PRO),

8、16、24-facet prism, 6-facet linearprism bi-directionally rotating, at variable speed

FOCUS: Linearly adjustable

WASH: 0~100% adjustable

EFFECT: 6 color wheel

DIMMER: 0~100% linearly adjustable

STROBE: 0.5~20 flash per second, speed adjustable

PAN AND TILT: Smooth, automatic Pan & Tilt position correction, speed adjustable

RANGE: Pan-540°, Tilt-270°(16-bit)

VECTOR MODE: Color+GOBO+Prism+XY Vector

CONTROL PROTOCOL: DMX 512, 3 pin interface

CHANNELS: 16/18/20CH

DISPLAY:Touch screen , the words can be upside down

NET WEIGHT: 15.5KG

GROSS WEIGHT: 17.5KG (

FIXTURE DIMENSION: L324×W238×H527(mm)

PACKING DIMENSION:L385×W300×H590 (mm)

menu selection



setting:

- 1.Run mode- dmx(use controller) ,music,auto
- 2.Dmx address--(6.Set the DMX IP code)
- 3.channel mode--16ch
- 4,Invert pan---(off)
- 5,Invert pan---(off)
- 6,pan-tilt swap ----(off)
- 7,pan-tilt encoder ----(on)Digital correction
- 8,No dmx signal -----(keep)
- 9,Display----(on)
- 10,Lamp on@start up----- (on) open light the lamp on
- 11,Linear color----- (off) select color full change
- 12,Load default

Manual:

Use the manual control dmx data of lamps and lanterns for 16ch

System:

The light running information

Advance:

only use factory setting

password: up down up down

4.3 Warning!

Warning1:Disconnecting the power supply if there are no lamp fixed inside the light well. Or it will burn down the light.

Warning2:Disconnecting the power supply before replacing the lamps.

Warning3:When the lamp is operating, its temperature will be extremely high.The feature of the recharge lamp couldn't work under the interruption power supply.Therefore,please let the lamp cool down completely(Approx 15 minutes at least).then you could operate the light again. Otherwise,it will be lead to high tension, short circuit or electric discharge.Moreover,the part of the control board will be burn down.

Warning4:All the lamps have its usage life,please inspect the lamp timing and ensure the lamp's usage life not exceed the rated life, otherwise,it may result in the lamp broken,deformation or blacken.if the lamp is broken,the caused impact will damage the projector's spot system. The electric parts on the circuit board may be started by the high voltage.The got lamp fragments may injure people, explode or set on fire.

5.Power supply and signal connection

5.1Power supply connection and control

Use the professional plug to connect the projector and main power supply. Please pay attention to the voltage,frequency the same as the mentioned on the projector. Suggest each light has a separately switch of the power supply so that could turn on or turn off each projector desultorily.

5.2 Signal connection

Please use the round 3-pin XLR plugs&sockets offered by menu
factory to connect the first projector's output to the second projector's
input and connect the second projector's output to the third projector's
input. And in the same way for the rest, Eventually connect the last p-
jector's output, all the projectors are together as the following figure

(picture3)



Picture 3

The projectors's control signal output or input by using the 3pin
XLR pug and socket..If need to lengthen the communication cable,
please make sure the both side of 3-pin plug is one to one.(one to
one,two to two ,three to three). Otherwise, the communication cable
will be interrupted.. The communicate cable is 2-cord screened cable
75Ω RESISTANCE with each core is at least a 0.5mm diameter.
(Caution: All the inside leading wire of 3-pin XLR plug couldn't touch
each other or plinth).

5.3 Lihgt connection

After doing the above operation and making sure all the projectors
had been installed with suitable lamps,press the power switch to check
whether everything is working normally.The Led display will show the
original DMX signal address.If the DMX signal is input, the green light
will be shark.

6.Set the DMX IP code

To make sure every projector react to the control signal correctly a
digital starting IP code should be given to every MAX projector. Digital
star IP code is a channel munber. By this number ,the projector should
obey the command form the controller.Digital staring IP code is set by
the operation panel,progressing to the staring IP value

When you use fixable channel controller,the address count method
as following:

First light's IP code value=(value of the former star IP CODE)+
(channel on the controller)

when you use any unfixable channel controller:

- 1.The first projector's starting IP code is 001
- 2.Channel number on the controller should not be less than the
channel number of the projector.

7.Control Display



Display: data show that the product information
Menu selection: touch screen& control key both use control
menu selection