

SKYSTAR

PROFESSIONAL SHOW LIGHTING

WED-1200

LED Outdoor Wash Light

USER MANUAL



SKYSTAR

GUANGZHOU LIGHTSTAR LIGHT CO.,LTD

[Http://www.lightskystar.com](http://www.lightskystar.com)

8CH

HLD-18M DMX Channel Control	
CH1 Dimmer	0-255
CH2 Strobe	0-239 240-255
CH3 AUTO	0 50 100 150 200 250 255 Open ch1-ch4 Color1 Color2 Color3 Color4 SOUND CHASE
CH4 Speed	0 255 Slow Fast
Ch5 RED	0 255 OPEN -----Full saturation
Ch6 GREEN	0 255 OPEN -----Full saturation
Ch7 BLUE	0 255 OPEN -----Full saturation
Ch8 White	0 255 OPEN -----Full saturation

12CH


Ch9 RED 2	0 255 OPEN -----Full saturation
Ch10 GREEN 2	0 255 OPEN -----Full saturation
Ch11 BLUE 2	0 255 OPEN -----Full saturation
Ch12 White 2	0 255 OPEN -----Full saturation

Product Introduction

Features:

- Automatic Mode LED lighting system, creating numerous effects.
- Light source: **120 X 10W 4in1 LED**
- Controller:DMX-512/following,voluntary,acoustic-activation
- Standard DMX Channel: **8/12ch**
- **IP address setting**
- 3 cores DMX Jack socket.
- Color: R,G,B 3 separate or mixed color bring various effects.
The device do not generate infrared ray and ultraviolet ray, bringing the least heat, which reduces the risk of conflagration for entertainment venue.
- Application: shops and stores, stages, night clubs, art gallery and so on.
- LED light source, saving more energy and durable.
- Acoustic control mode(sensibility adjustable).
- Power supply: AC100-240V/50-60Hz
- Maximum electricity consumption: **1200 VA**
- Dimension(LxWxH) **700x380x540mm**
- Weight: **30kg**
- Working environment: indoor $-20^{\circ}\text{C}-50^{\circ}\text{C}$

DMX512 MODE:

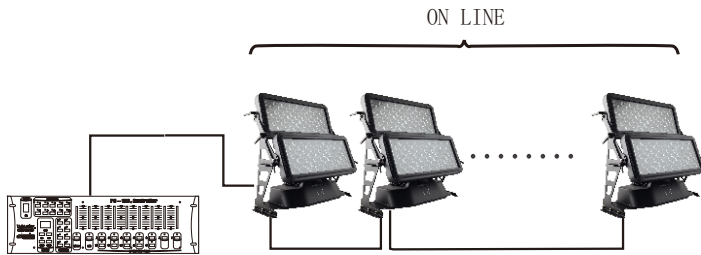

A-DMX512 [address set]

This function let you change device address value.

1. Press the "MENU" button one or many times, until shows "D.X XX"..
- 2, use the "UP" or "DOWN" button to select the address value "001-512", press "ENTER" button or press confirm exit "MENU" button to give up exit.

MENU:



Display panel operation

Press the "MENU" button, press the "UP" or "DOWN" Go to the submenu press "ENTER"

d001	d512	8CH mode
CP00	01-99	gradient
CC00	01-99	jump
Cj00	01-99	auto run
CL01	01-99	select color
bebe	bebe	strobe
R001	L255	red
G001	G255	green
B001	D255	blue
U001	L255	white
St00	ST99	strobe